



KEEP THE CHUCK CLEAN!

1. Place a clean “buffer” wafer on top of the thermocouple wafer

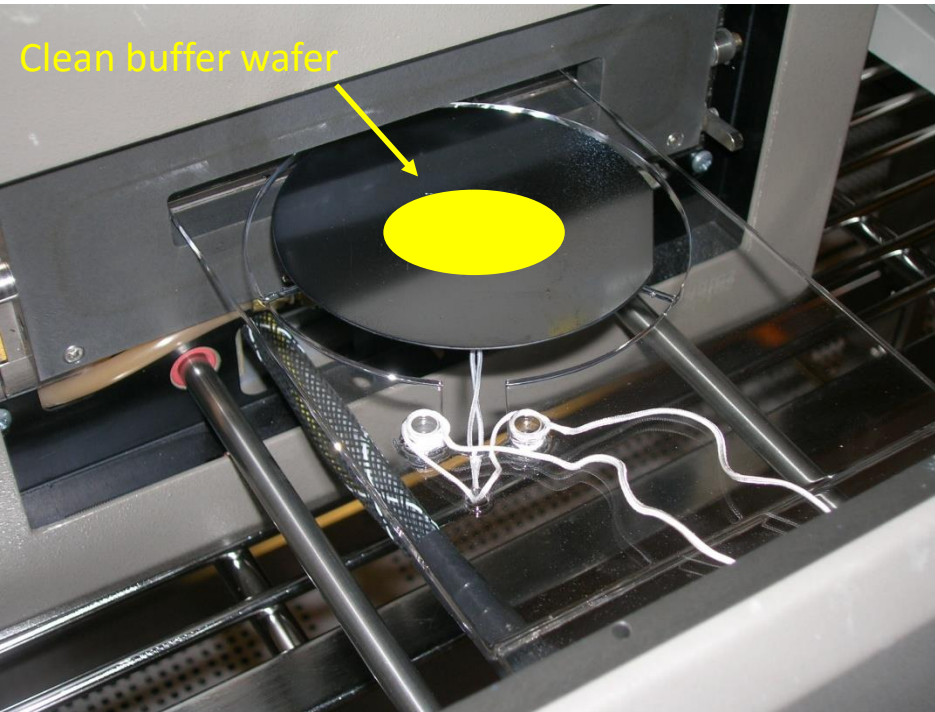

2. Place your sample on top of the clean “buffer” wafer

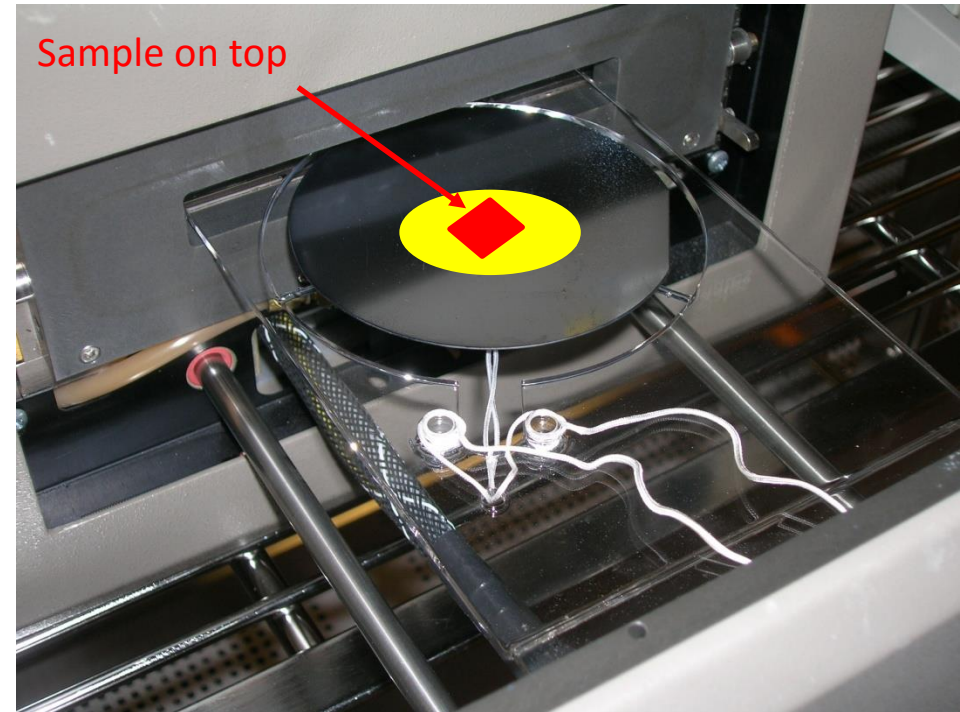

- ** This prevents contamination from the chuck to your sample!
- ** Buffer Wafer should be any piece of silicon cleaned in Piranha for 10 minutes
- ** DO NOT move or handle the thermocouple wafer – it is very fragile